

# Transportation and Storage



## LOADING AND UNLOADING

Pre-insulated pipes are loaded onto trucks by the manufacturer. The recipient is responsible for unloading them. It is forbidden to throw pipes or to roll them directly onto the ground. Lifting mechanisms are used for unloading pre-insulated pipes.

## LIFTING

It is forbidden to use steel cables and chains to lift the pipes. Use wide straps, at least 50mm wide, to ensure that the polyethylene casing is not deformed or damaged in the lifting process.

It is forbidden to use pipes with damaged polyethylene casing and polyurethane insulation. If the outside temperature is lower than  $-20^{\circ}\text{C}$ , lifting pre-insulated pipes are forbidden.

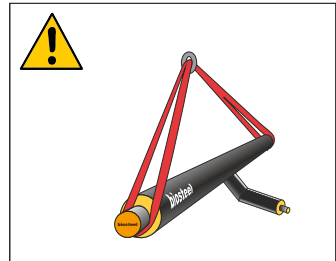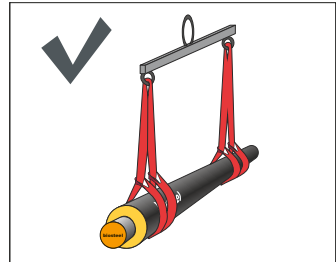

**biosteel a/s**

Algade 35, Grønbjerg · DK-6971 Spjald, Denmark  
+45 4027 8099 · info@biosteel.dk · [www.biosteel.dk](http://www.biosteel.dk)