



Pur Shell - Shrinkable Sleeve

Joints installation


1. Slide the heat-shrinkable sleeve over one of the pre-insulated ends. Keep clean.

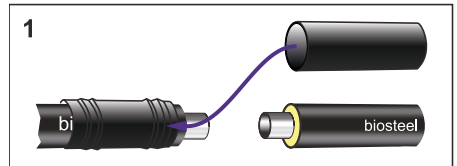


2. Weld the steel pipes according to the applicable standards.




3. Remove, using a knife or a scraper, a part of the thermal insulation, so that there will be a flat surface at both ends.

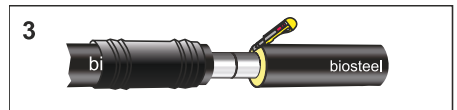

4. Measure the distance between the ends.

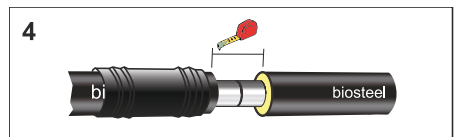

5. Measure the same distance (fig.4) on both PUR Shells. Cut both PUR-Shells with a saw.

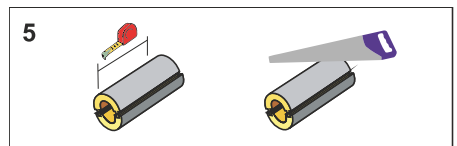

biosteel a/s

Algade 35, Grønbjerg · DK-6971 Spjald, Denmark
+45 4027 8099 · info@biosteel.dk · www.biosteel.dk